



SERVICE DEPARTMENT BULLETIN

BULLETIN #90354

GENERAL CLASSIFICATION: Control Deck Repair


SPECIFIC SUBJECT: Power/Reset Switch (Part No. 25) Enhancement

On all NES Control Deck repairs, the Power/Reset (P/R) switch requires inspection. If the Control Deck is utilizing a type “A” P/R switch (shown below), it must be replaced with the new switch. Through normal switch contact wear, a non-intended reset may be caused while playing a game. This may also cause the loss of game information when attempting to save the information to memory for games such as “The Legend of Zelda”.

Repair Action


Perform modification and charge customer appropriately. All units affected are beyond the warranty period. No warranty claims will be accepted for this enhancement.

If the Control Deck is utilizing type “A” P/R switch, replace it with type “B”, “C”, or “D” P/R switches (shown below).

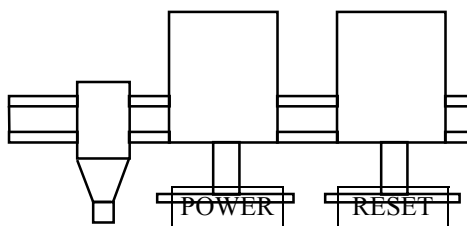


Type A

This switch is defective and must be replaced.

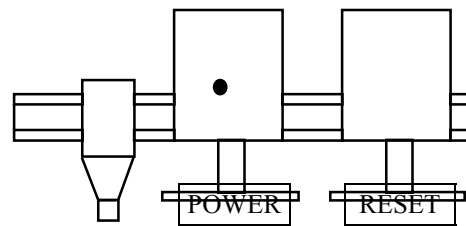


Type B

The “Power” side of the switch has a small dark colored mark or dot on its housing.

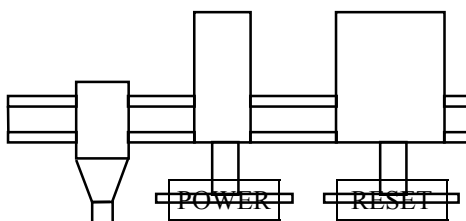

Type C

The “Power” side of the switch is smaller in size when compared with types A and B.

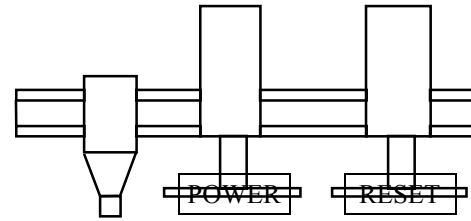

Type D

Both the “Power” and “Reset” sides of the switch are smaller when compared with types A and B.